

1/16 - 1/8 DIN INDICATOR CONCISE PRODUCT MANUAL (59344-3)



CAUTION: Installation should be only performed by technically competent personnel. Local Regulations regarding electrical installation & safety must be observed.

1. INSTALLATION

The two indicators covered by this manual have different DIN case sizes (refer to section 9). Some installation details vary between these models. These differences have been clearly shown.

Note: The functions described in sections 2 to 8 are common to both models.



Installing Option Modules

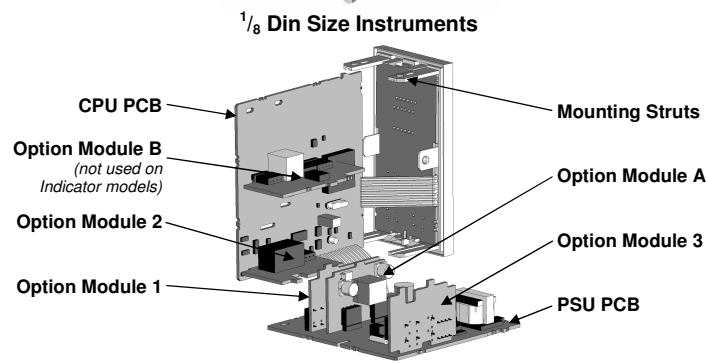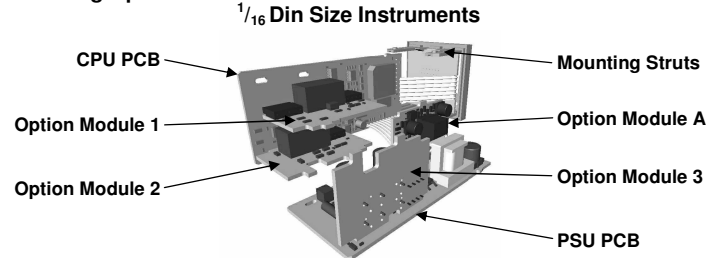

- To access modules 1 or A, first detach the PSU and CPU boards from the front by lifting first the upper, and then lower mounting struts. Gently separate the boards.
- Plug the required option modules into the correct connectors, as shown below.
 - Locate the module tongues in the corresponding slot on the opposite board.
 - Hold the main boards together while relocating back on the mounting struts.
 - Replace the instrument by aligning the CPU and PSU boards with their guides in the housing, then slowly push the instrument back into position.

Note: Option modules are automatically detected at power up.

Option Module Connectors

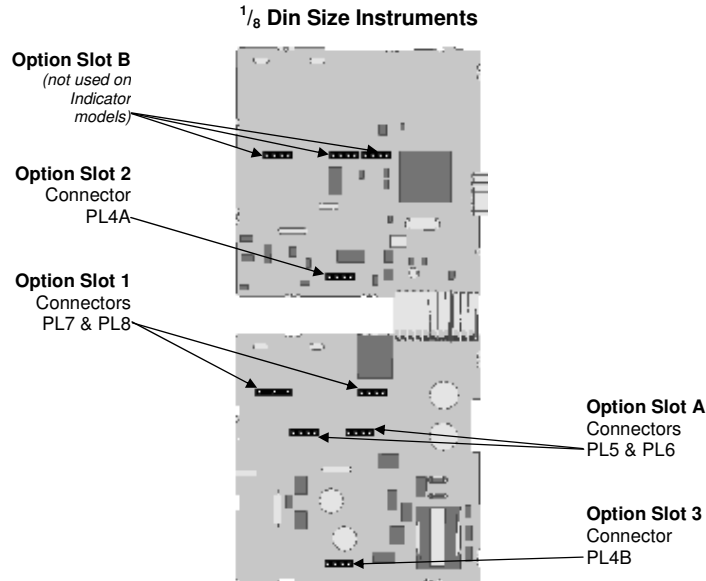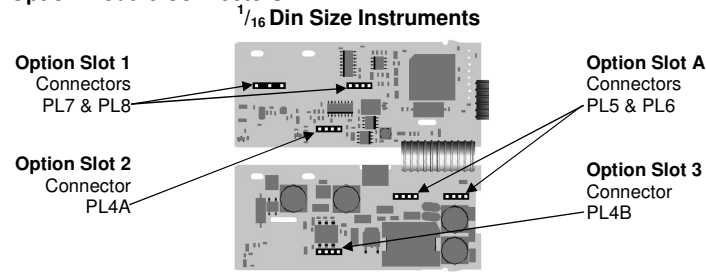


Panel-Mounting

The mounting panel must be rigid, and may be up to 6.0mm (0.25inch) thick. Cut-out sizes are:

Cut-Out Dim A: 1/16 Din = 45mm, 1/8 Din = 92mm
Cut-Out Dim B: 1/16 & 1/8 Din = 45mm

For n multiple instruments mounted side-by-side, cut-out A is 48n-4mm (1/16 Din) or 96n-4mm (1/8 Din)

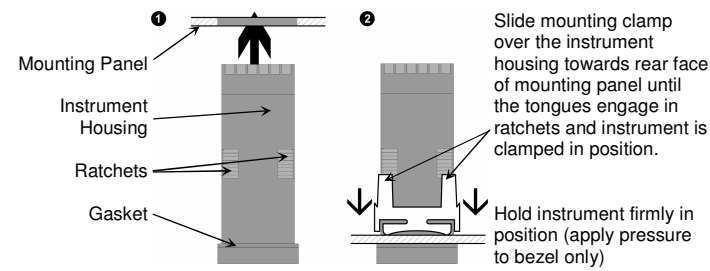


CAUTION: Do not remove the panel gasket; it is a seal against dust and moisture.

Rear Terminal Wiring

USE COPPER CONDUCTORS (EXCEPT FOR T/C INPUT)

Single Strand wire gauge: Max 1.2mm (18SWG)

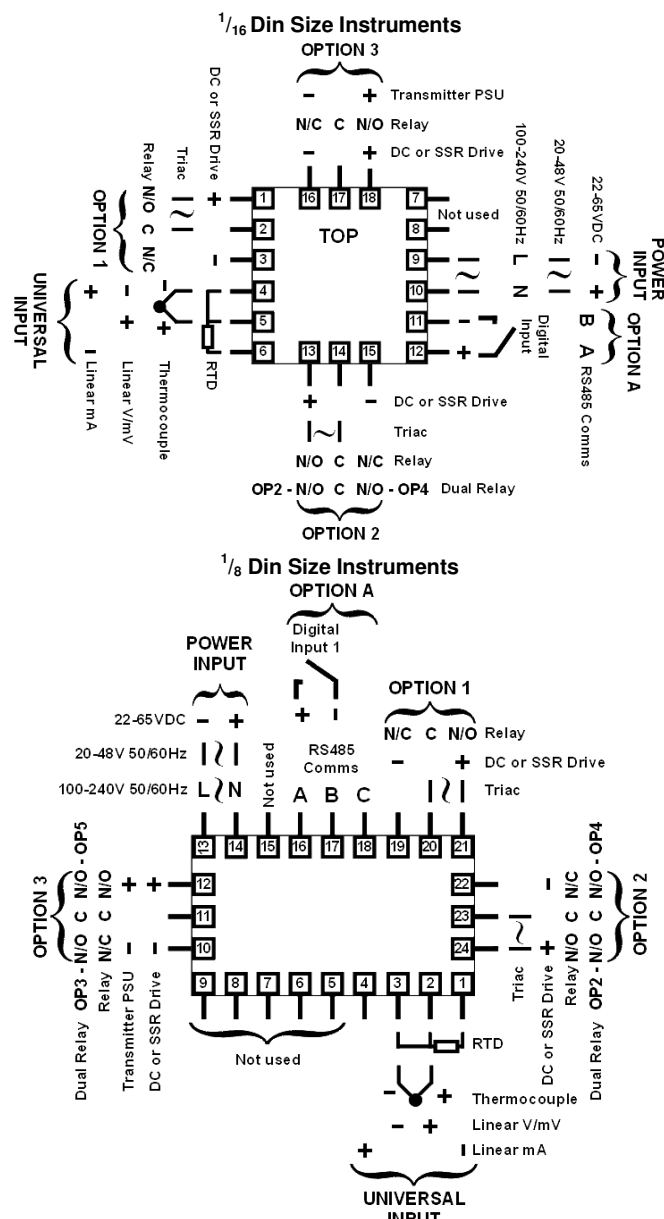

These diagrams show all possible option combinations. The actual connections required depend on the model and options fitted.

CAUTION: Check information label on housing for correct operating voltage before connecting supply to Power Input
Fuse: 100 - 240V ac - 1amp anti-surge
24/48V ac/dc - 315mA anti-surge

Note: At first power-up the message `Co nF` is displayed, as described in section 5 of this manual. Access to other menus is denied until configuration mode is completed

2. SELECT MODE

Select mode is used to access the configuration and operation menu functions. It can be accessed at any time by holding down **[]** and pressing **[]**. The **SLCt** legend is shown for 1 second, followed by the legend for the current mode. Press **[]** or **[]** to choose the required mode, then press **[]** to enter. An unlock code is required to prevent unauthorised entry to Configuration, & Setup modes. Press **[]** or **[]** to enter the unlock code, then press **[]** to proceed.

Mode	Legend for 1 sec followed by	Set Value	Description	Default Unlock Codes	Units Display (1/8 Din Only)
Operator		OPtR	Normal operation	None	
Set Up	SLCt	SEtP	Tailor settings for application	10	5
Configuration		Co nF	Configure instrument for use	20	
Product Info		Pr oF	Instrument information	None	

Note: Automatic return to Operator Mode after 2 minutes without key activity.

3. CONFIGURATION MODE

First select Configuration mode from Select mode (refer to section 2). Press **[]** to scroll through the parameters. While this key is pressed, and up to 1 second after, the parameter legend is shown, followed by the current value.

Press **[]** or **[]** to set the required value. Press **[]** to display YES/P, press **[]** to accept the change, otherwise parameter will revert to previous value. To exit from Configuration mode, hold down **[]** and press **[]** to return to Select mode.

Note: Parameters displayed depends on how instrument has been configured. Refer to user guide (available from your supplier) for further details. Parameters marked * are repeated in Setup Mode.

Parameter	Legend for 1 sec followed by	Set Value	Adjustment Range & Description	Default Value	Units Display (1/8 Din Only)
Input Range/Type		inPt	See following table for possible codes	JL	r
Code	Input Type & Range	Code	Input Type & Range	Code	Input Type & Range
bC	B: 100 - 1824 °C	LC	L: 0.0 - 537.7 °C	P24F	PIRh20% vs 40%: 32 - 3362 °F
bF	B: 211 - 3315 °F	LF	L: 32.0 - 999.9 °F	PtC	Pt100: -199 - 800 °C
cC	C: 0 - 2320 °C	nC	N: 0 - 1399 °C	PtF	Pt100: -328 - 1472 °F
cF	C: 32 - 4208 °F	nF	N: 32 - 2551 °F	PtC	Pt100: -128.8 - 537.7 °C
JC	J: -200 - 1200 °C	rC	R: 0 - 1759 °C	PtF	Pt100: -199.9 - 999.9 °F
JF	J: -328 - 2192 °F	rF	R: 32 - 3198 °F	PtC	Pt100: -128.8 - 537.7 °C
JL	J: -128.8 - 537.7 °C	SL	S: 0 - 1762 °C	0.20	0 - 20 mA DC
JF	J: -199.9 - 999.9 °F	SF	S: 32 - 3204 °F	4.20	4 - 20 mA DC
KL	K: -240 - 1373 °C	tC	T: -240 - 400 °C	0.50	0 - 50 mV DC
KF	K: -400 - 2503 °F	tF	T: -400 - 752 °F	10.50	10 - 50 mV DC
KL	K: -128.8 - 537.7 °C	tC	T: -128.8 - 400.0 °C	0.5	0 - 5 V DC
KF	K: -199.9 - 999.9 °F	tF	T: -199.9 - 752.0 °F	1.5	1 - 5 V DC
LL	L: 0 - 762 °C	P24C	PIRh20% vs. 40%: 0 - 1850 °C	0.10	0 - 10 V DC
LF	L: 32 - 1403 °F	P24F	PIRh20% vs. 40%: 0 - 1850 °C	2.10	2 - 10 V DC

Note: Decimal point shown in table indicates temperature resolution of 0.1°

Parameter	Legend for 1 sec followed by	Set Value	Adjustment Range & Description	Default Value	Units Display (1/8 Din Only)
Scale Range Upper Limit	ruL		Scale Range Lower Limit +100 to Range Maximum	Max (Lin = 1000)	u
Scale Range Lower Limit	rLL		Range Minimum to Scale Range Upper Limit -100	Min (Lin = 0)	L
Decimal point position	dPoS		0=XXXX, 1=XXX.X, (non-temperature ranges only) 2=XX.XX, 3=X.XXX	1	P
Linear Range Engineering Units Display	L nU		None (Blank), °C or °F 1/8 Din units only where linear inputs represent temperature	nonE	C F
Multi-Point Scaling	Pr pS		EnAb d SR Enables or disables the input multi-point scaling feature	d SR	S
Alarm 1Type	ALR 1		P_H 1 P_Lo nonE Process High Alarm Process Low Alarm No alarm	P_H 1	1
High Alarm 1*	PhA 1		Alarm 1 value, adjustable within scaled range, in display units	Max	1 (Alm1 only = A)
Low Alarm 1*	PLA 1			Min	
Alarm 1 Hysteresis*	AHY 1		1 LSD to full span in display units on safe side of alarm	1	-
Alarm 2Type	ALR 2			nonE	2
High Alarm 2*	PhA 2		Options as for alarm 1	Max	
Low Alarm 2*	PLA 2			Min	
AI 2 Hysteresis*	AHY 2			1	
Alarm 3Type	ALR 3			nonE	3
High Alarm 3*	PhA 3		Options as for alarm 1	Max	
Low Alarm 3*	PLA 3			Min	
AI 3 Hysteresis*	AHY 3			1	
Alarm 4Type	ALR 4			nonE	4

Parameter	Legend for 1 sec followed by	Set Value	Adjustment Range & Description	Default Value	Units Display (1/8 Din Only)
High Alarm 4*	PhA 4			Max	4
Low Alarm 4*	PLA 4		Options as for alarm 1	Min	
AI 4 Hysteresis*	AHY 4			1	4
Alarm 5 Type	ALR 5			nonE	5
High Alarm 5*	PhA 5		Options as for alarm 1	Max	
Low Alarm 5*	PLA 5			Min	5
AI 5 Hysteresis*	AHY 5			1	5
Output 1 Usage	USE 1	A Ind	Alarm 1, direct, non-latching		rEtP for linear outputs, A Ind for others
		A Inr	Alarm 1, reverse, non-latching		
		A ILd	Alarm 1, direct, latching		
		A ILr	Alarm 1, reverse, latching		
		A2nd	Alarm 2, direct, non-latching		
		A2nr	Alarm 2, reverse, non-latching		
		A2Ld	Alarm 2, direct, latching		
		A2Lr	Alarm 2, reverse, latching		
		A3nd	Alarm 3, direct, non-latching		
		A3nr	Alarm 3, reverse, non-latching		
		A3Ld	Alarm 3, direct, latching		
		A3Lr	Alarm 3, reverse, latching		
		A4nd	Alarm 4, direct, non-latching		
		A4nr	Alarm 4, reverse, non-latching		
		A4Ld	Alarm 4, direct, latching		
A4Lr	Alarm 4, reverse, latching				
A5nd	Alarm 5, direct, non-latching				
A5nr	Alarm 5, reverse, non-latching				
A5Ld	Alarm 5, direct, latching				
A5Lr	Alarm 5, reverse, latching				
0 12d	Logical Alarm 1 OR 2, direct				
0 12r	Logical Alarm 1 OR 2, reverse				
0 13d	Logical Alarm 1 OR 3, direct				
0 13r	Logical Alarm 1 OR 3, reverse				
0 23d	Logical Alarm 2 OR 3, direct				
0 23r	Logical Alarm 2 OR 3, reverse				
AnYd	Any active alarm, direct				
AnYr	Any active alarm, reverse				
rEtP	Retransmit PV Output				
dc 10	0 to 10VDC (adjustable) transmitter power supply*				
Output 1 PV Retransmit Type	tYP 1	0.5	0 to 5 V DC output		
		0.10	0 to 10 V DC output		
		2.10	2 to 10 V DC output	0.10	
		0.20	0 to 20 mA DC output		
Retransmit OP 1 Scale maximum	ro 1H	0.5	Display value between, -1999 & 9999 at which Output 1 will be at maximum	Range max	
		0.10	Display value between, -1999 & 9999 at which Output 1 will be at minimum	Range min	
		0.20	Display value between, -1999 & 9999 at which Output 1 will be at minimum		
TxPSU 1 level	PSU 1		Output 1 Power Supply (0 to 10VDC)*	10.0	1
Output 2 Usage	USE 2		As for Output 1 Usage	A2nd	2
Output 2 PV Retransmit Type	tYP 2		As for Output 1 PV Retransmit Type		2
Retransmit OP2 Scale Maximum	ro 2H		As for Retransmit Output 1 Scale Maximum		H
Retransmit OP2 Scale Minimum	ro 2L		As for Retransmit Output 1 Scale Minimum		L
TxPSU 2 level	PSU 2		Output 2 Power Supply (0 to 10VDC)*	10.0	2
Output 3 Usage	USE 3		As for Output 1 Usage	A3nd	3
Output 3 PV Retransmit Type	tYP 3		As for Output 1 PV Retransmit Type		3
Retransmit OP3 Scale maximum	ro 3H		As for Retransmit Output 1 Scale Maximum		H
Retransmit OP3 Scale minimum	ro 3L		As for Retransmit Output 1 Scale Minimum		L
TxPSU 3 level	PSU 3		Output 3 Power Supply (0 to 10VDC)*	10.0	3
Output 4 Usage	USE 4		Alarm output options as for Output 1 Usage	A4nd	4
Output 5 Usage	USE 5		As for Output 1 Usage	A5nd	5
Display Strategy	d SP		0, 1, 2, 3, 4 or 6 (refer to section 6)	0	d
Display Colour	CLor	rEd	Permanent Red		
		Grn	Permanent Green		
		r-G	Red to Green on any alarm	G-r	
Serial Communication Protocol	Pr oT	ASC 1	ASCII		
		r7bn	Modbus with no parity	r7bn	
		r7be	Modbus with Even Parity		
	r7ba	Modbus with Odd Parity			
Comms Bit Rate	bAud		1.2, 2.4, 4.8, 9.6 or 19.2 kbps	4.8	b
Comms Address	Addr		1 to 255 (Modbus), 1 to 99 (ASCII)	1	A

Continued on next page...

Parameter	Legend for 1 sec followed by	Set Value	Adjustment Range & Description	Default Value	Units Display (1/2 Din Only)
Comms Write		rLW / r_0	Read/Write / Read only	rLW	E
Digital Input Usage		rrLY	Reset latched relay(s)	rrLY	1
		lArE	Initiate Tare (zero display)		
		rPU	Reset min/max PV values		
		rE	Reset Alarm 1 elapsed time		
Config Lock		LLoc	Config Mode lock code, 0 to 9999	20	C

4. SETUP MODE

Note: Configuration must be completed before adjusting Setup parameters. First select Setup mode from Select mode (refer to section 2). Press to scroll through the parameters (while this key is pressed, and for 1 sec after, the parameter legend is shown, then the current value). Press or to change the value. To exit from Setup mode, hold down and press to return to Select mode.

Note: Parameters displayed depends on how instrument has been configured.

Parameter	Legend for 1 sec followed by	Set Value	Adjustment Range & Description	Default Value	Units Display (1/2 Din Only)
Input Filter Time Constant		FILT	OFF or 0.5 to 100.0 secs	2.0	t
Process Variable Offset		OFFS	±Span of controller	0.0	o
Raw PV value		SrU	Linear input value, un-scaled (mA, mV or VDC)	blank	blank
High Alarm 1		PHR1	Alarm 1 value, adjustable within scaled range, in display units	Max	1 (Alm1 only = A)
Low Alarm 1		PLR1	Options as for alarm 1	Min	2
Alarm 1 Hysteresis		AHY1	1 LSD to full span in display units on safe side of alarm	1	-
High Alarm 2		PHR2	Options as for alarm 1	Max	2
Low Alarm 2		PLR2		Min	
AI 2 Hysteresis		AHY2	Options as for alarm 1	1	=
High Alarm 3		PHR3	Options as for alarm 1	Max	3
Low Alarm 3		PLR3		Min	
AI 3 Hysteresis		AHY3	Options as for alarm 1	1	=
High Alarm 4		PHR4	Options as for alarm 1	Max	4
Low Alarm 4		PLR4		Min	
AI 4 Hysteresis		AHY4	Options as for alarm 1	1	4
High Alarm 5		PHR5	Options as for alarm 1	Max	5
Low Alarm 5		PLR5		Min	
AI 5 Hysteresis		AHY5	Options as for alarm 1	1	5
Scaling Breakpoint 1		ScA1	Multi-point scaling breakpoint 1 value, adjustable from 0 to 100 in % of span	100	1
Display Value 1		dS1	Value to be displayed at multi-point scaling breakpoint 1, in display units	Range Max	1
Scaling Breakpoint 2		ScA2	Multi-point scaling breakpoint 2, adjustable up to 100% of span. Must be >ScA1 value	100	2
Display Value 2		dS2	Value to be displayed at Multi-point scaling breakpoint 2, in display units	Range Max	2
Scaling Breakpoint 3		ScA3	Multi-point scaling breakpoint 3, adjustable up to 100% of span. Must be >ScA2 value	100	3
Display Value 3		dS3	Value to be displayed at Multi-point scaling breakpoint 3, in display units	Range Max	3
Scaling Breakpoint 4		ScA4	Multi-point scaling breakpoint 4, adjustable up to 100% of span. Must be >ScA3 value	100	4
Display Value 4		dS4	Value to be displayed at Multi-point scaling breakpoint 4, in display units	Range Max	4
Scaling Breakpoint 5		ScA5	Multi-point scaling breakpoint 5, adjustable up to 100% of span. Must be >ScA4 value	100	5
Display Value 5		dS5	Value to be displayed at Multi-point scaling breakpoint 5, in display units	Range Max	5
Scaling Breakpoint 6		ScA6	Multi-point scaling breakpoint 6, adjustable up to 100% of span. Must be >ScA5 value	100	6
Display Value 6		dS6	Value to be displayed at Multi-point scaling breakpoint 6, in display units	Range Max	6
Scaling Breakpoint 7		ScA7	Multi-point scaling breakpoint 7, adjustable up to 100% of span. Must be >ScA6 value	100	7
Display Value 7		dS7	Value to be displayed at Multi-point scaling breakpoint 7, in display units	Range Max	7
Scaling Breakpoint 8		ScA8	Multi-point scaling breakpoint 8, adjustable up to 100% of span. Must be >ScA7 value	100	8
Display Value 8		dS8	Value to be displayed at Multi-point scaling breakpoint 8, in display units	Range Max	8
Scaling Breakpoint 9		ScA9	Multi-point scaling breakpoint 9, adjustable up to 100% of span. Must be >ScA8 value	100	9
Display Value 9		dS9	Value to be displayed at Multi-point scaling breakpoint 9, in display units	Range Max	9
Tare Feature		tArE / dSA	Enables or disables the input auto-zero Tare feature	dSA	r
Setup Lock Code		SLoc	0 to 9999	10	5

Note: Operator mode screens follow, without exiting from Setup mode.

5. MESSAGES & ERROR INDICATIONS

These messages indicate that the instrument may require attention, or there is a problem with the signal input connection. *The message legend is shown for 1 second, followed by its value.*

Caution: Do not continue with the process until the issue is resolved.

Parameter	Legend for 1 sec followed by	Value	Description	Units Display (1/2 Din Only)
Instrument parameters are in default conditions		Goto	Configuration & Setup is required. This screen is seen at first turn on, or if hardware configuration is changed. Press to enter Configuration Mode, next press or to enter the unlock code, then press to proceed	C
Input Over Range		[HH]	Input signal is > 5% over-range	E
Input Under Range		[LL]	Input signal is > 5% under-range (>10% under-range for 4 to 20mA, 1 to 5V and 2 to 10V ranges)	
Input Sensor Break		OPEN	Break detected in input signal sensor or wiring	
Option 1 Error		Err1	Option 1 module fault	1
Option 2 Error		Err2	Option 2 module fault	2
Option 3 Error		Err3	Option 3 module fault	3
Option A Error		ErrA	Option A module fault	A
Option B Error		Errb	Shown if any module is fitted (option B not used on Indicators)	b

Note: [HH], [LL] or OPEN may also be displayed if an incorrect input type is selected.

6. OPERATOR MODE

This mode is entered at power on, or accessed from Select mode (see section 2). **Note: All Configuration mode and Setup mode parameters must be set as required before starting normal operations.**

Press to scroll through the parameters (while this key is pressed, and for 1 sec after, the parameter legend is shown, followed by the current value).

Note: All Operator Mode parameters in Display strategy 6 are read only (see dSP in configuration mode), they can only be adjusted via Setup mode.

Legend for 1 sec followed by	Value	Display Strategy and When Visible	Description	Units Display (1/2 Din Only)
	PV Value*	Always	Process Variable value Read only Latched outputs can be reset	C, F or blank
	Max PV Value	Strategies 0, 1, 3, 4, & 6	Maximum displayed value (inc [HH] or [OPEN]) since [Max PV] last reset. To reset, press or for 3 seconds, display = ---- when reset	C, F or blank
	Min PV Value	Strategies 0, 1, 3, 4, & 6	Minimum displayed value (inc [LL] or [OPEN]) since [Min PV] last reset. To reset, press or for 3 seconds, display = ---- when reset	C, F or blank
	Elapsed Time	Strategies 0, 4 & 6 if alarm 1 configured. Format mm.ss to 99.59 then mmm.s (10 sec increments) Shows [HH] if >999.9	Accumulated alarm 1 active time since [Et] last reset. To reset, press or for 3 seconds, display = ---- when reset	E
	Alarm 1 Value	Strategies 2, 3, 4 & 6 if alarm 1 configured	Alarm 1 value, adjustable except in Strategy 6	1 (Alm1 only = A)
	Alarm 2 Value	Strategies 2, 3, 4 & 6 if alarm 2 configured	Alarm 2 value, adjustable except in Strategy 6	2
	Alarm 3 Value	Strategies 2, 3, 4 & 6 if alarm 3 configured	Alarm 3 value, adjustable except in Strategy 6	3
	Alarm 4 Value	Strategies 2, 3, 4 & 6 if alarm 4 configured	Alarm 4 value, adjustable except in Strategy 6	4
	Alarm 5 Value	Strategies 2, 3, 4 & 6 if alarm 5 configured	Alarm 5 value, adjustable except in Strategy 6	5
	Active Alarm Status*	When one or more alarms are active	Alarm 4 active Alarm 2 active Alarm 3 active Alarm 5 active Latched outputs can be reset	1 if alarm 1 active

Alarm Indication

The Active Alarm Status screen indicates any active alarms. In addition, the associated Alarm LED flashes.
For latching alarm outputs, the LED flashes when the alarm condition exists, and goes to ON when the alarm condition is no longer present if the output has not yet been reset.

*Resetting Latched Alarm Outputs

Any latched outputs can be reset whilst the Process variable or Alarm Status screens are displayed, by pressing the or key, via the Digital Input (if fitted) or with a communications command via the RS485 module (if fitted).

Note: Outputs will only reset if their alarm condition is no longer present.

Caution: A reset will affect ALL latched outputs.


Additional 1/8 Din Indicator Units Display and LED's

In Operator Mode, a Units display shows C or F when temperature values are shown. This display is also used in other modes as a confirmation of the parameter type currently shown in the main display. The SET LED indicator is off in Operator Mode, Flashing in Configuration Mode and ON in Set-up mode. MIN and MAX LED's light when these stored values are shown.

Multi-Point Scaling

When enabled (MPs = EnAb), up to 9 breakpoints can be set to compensate for non-linear input signals.

For each breakpoint, the input scale value (ScAn) is entered in % of input span, followed by the value to be shown (dSn) in display units. Each breakpoint's input scale value must be higher than the previous value, but the display values can be higher or lower. Any scale value set to 100% becomes the last in the series.

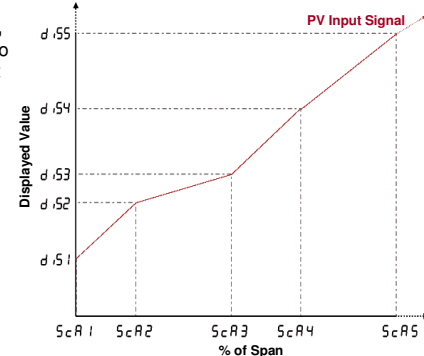

Tare Feature

When Tare is enabled (tArE = EnAb), it can be used to set the displayed value to zero automatically, by making the PV Offset parameter equal, but opposite to, the current process variable value. Tare can be initiated via the Digital Input (if fitted), with a communications command via the RS485 module (if fitted) or by using the following key press sequence:

Press until the process variable is displayed. Hold down and together for three seconds until the display shows YES. Release both keys and press within 3 seconds to confirm the request.

The display should read 0 briefly, then begin responding to input signal changes.

Note: Tare request is aborted if this sequence is not followed exactly.

7. PRODUCT INFORMATION MODE

First select Product information mode from Select mode (refer to section 2).

Press to view each parameter (while this key is pressed, and for 1 sec after, the parameter legend is shown, followed by its value). Hold down and press to return to Select mode. **Note: These parameters are all read only.**

Parameter	Legend for 1 sec followed by	Value	Description	Units Display (1/2 Din Only)		
Input type		In I / Un I / nonE / rLY	Universal input / No option fitted / Relay output	t		
Option 1 module type fitted		OPn1 / SSR / tAr / LIn	SSR drive output / Triac output / Linear DC voltage / current output	1		
Option 2 module type fitted			OPn2 / nonE / rLY / SSR / tAr / LIn	No option fitted / Relay output / Dual Relay (outputs 2 & 4) / SSR drive output / Triac output / Linear DC voltage / current output	2	
Option 3 module type fitted				OPn3 / nonE / rLY / SSR / LIn / dc24	No option fitted / Relay output / Dual Relay (outputs 3 & 5) / SSR drive output / Linear DC voltage / current output / 24V DC Transmitter power supply	3
Auxiliary Option A module type fitted					OPnA / nonE / r485 / dI0	No option fitted / RS485 communications / Digital Input
Firmware type	FUJ				Value displayed is firmware type number	F
Firmware issue	ISS	Value displayed is firmware issue number			n	
Product Rev Level	PRL	Value displayed is Product Revision Level	r			
Manufactured Date	d000	Month & year of manufacture. Format mmyy	d			
Serial number 1	Sr1	First four digits of serial number	A			
Serial number 2	Sr2	Middle four digits of serial number	b			
Serial number 3	Sr3	Last four digits of serial number	c			

8. SERIAL COMMUNICATIONS

Refer to the full user guide (available from your supplier) for details.

9. SPECIFICATIONS

UNIVERSAL INPUT

Thermocouple: ±0.1% of full range, ±1LSD (±1°C for Thermocouple CJC).
Calibration: BS4937, NBS125 & IEC584.
PT100 Calibration: ±0.1% of full range, ±1LSD.
BS1904 & DIN43760 (0.00385Ω/°C).
DC Calibration: ±0.1% of full range, ±1LSD.
Sampling Rate: 4 per second.
Impedance: >10MΩ resistive, except DC mA (5Ω) and V (47kΩ).
Sensor Break Detection: Thermocouple, RTD, 4 to 20 mA, 2 to 10V and 1 to 5V ranges only. High alarms activate for thermocouple/RTD sensor break, low alarms activate for mA/V DC sensor break.

Isolation: Isolated from all outputs (except SSR driver).
Universal input must not be connected to operator accessible circuits if single relay outputs are connected to a hazardous voltage source. Supplementary insulation or input grounding would then be required.

DIGITAL INPUT

Voltage Input: Reset or Tare occurs on high (2 to 24VDC) to low <0.8VDC, or Open to Closed transition.
Isolation: Reinforced safety isolation from inputs and other outputs.

OUTPUTS

Relay
Contact Type & Rating: Single pole double throw (SPDT), latching or non-latching action (selectable); 2A resistive at 120/240VAC.
Lifetime: >500,000 operations at rated voltage/current.
Isolation: Basic isolation from universal input and SSR outputs.

Dual Relay
Contact Type & Rating: Single pole single throw (SPST), latching or non-latching action (selectable); 2A resistive at 120/240VAC.
Lifetime: >200,000 operations at rated voltage/current.
Isolation: Reinforced safety isolation from inputs and other outputs.

SSR Driver
Drive Capability: SSR drive voltage >10V into 500Ω min.
Isolation: Not isolated from universal input or other SSR driver outputs.

Triac
Operating Voltage: 20 to 280Vrms (47 to 63Hz).
Current Rating: 0.01 to 1A (full cycle rms on-state @ 25°C); derates linearly above 40°C to 0.5A @ 80°C.
Isolation: Reinforced safety isolation from inputs and other outputs.

Linear DC
Accuracy: ±0.25% (mA @ 250Ω, V @ 2kΩ). Degrades linearly to ±0.5% for increasing burden (to specification limits).
Resolution: 8 bits in 250ms (10 bits in 1s typical, >10 bits in >1s typical).
Isolation: Reinforced safety isolation from inputs and other outputs.

Transmitter PSU
Power Rating: 24V TxPSU Module; Unregulated 20 to 28V DC into 910Ω min Linear output Module; Regulated 0.0 to 10.0V into 500Ω min.
Isolation: Reinforced safety isolation from inputs and other outputs.

SERIAL COMMUNICATIONS
Physical: RS485, at 1200, 2400, 4800, 9600 or 19200 bps.
Protocols: Selectable between Modbus and West ASCII.
Isolation: Reinforced safety isolation from all inputs and outputs.

OPERATING CONDITIONS (FOR INDOOR USE)
Ambient Temperature: 0°C to 55°C (Operating), -20°C to 80°C (Storage).
Relative Humidity: 20% to 95% non-condensing.
Supply Voltage and Power: 100 to 240VAC ±10%, 50/60Hz, 7.5VA (for mains powered versions), or 20 to 48VAC 50/60Hz 7.5VA or 22 to 65VDC 5W (for low voltage versions).

ENVIRONMENTAL
Standards: CE, UL & ULC
EMI: Complies with EN61326 (Susceptibility & Emissions).
Safety: Complies with EN61010-1 & UL3121.
Considerations: Pollution Degree 2, Installation Category II.
Front Panel Sealing: To IP66 (IP20 behind the panel).

PHYSICAL
Front Bezel Size: 1/16 Din = 48 x 48mm, 1/8 Din = 96 x 48mm
Depth Behind Panel: 1/16 Din = 110mm, 1/8 Din = 100mm.
Weight: 0.21kg maximum.